
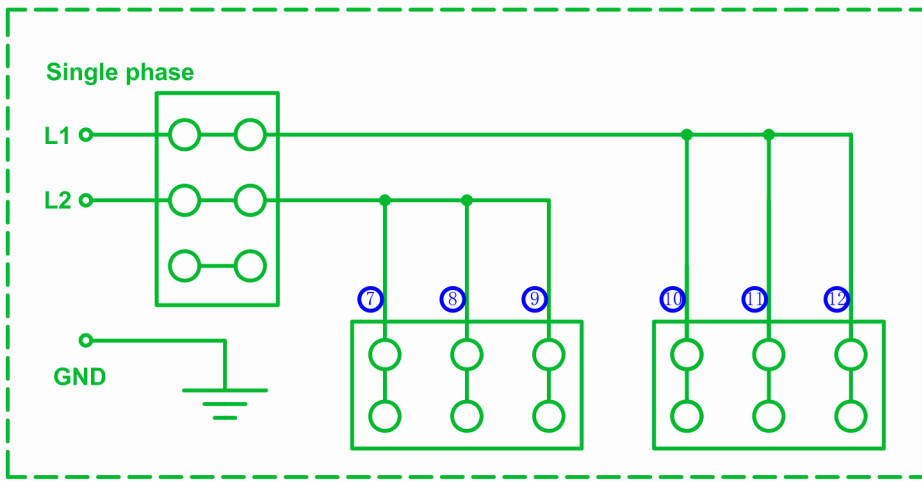
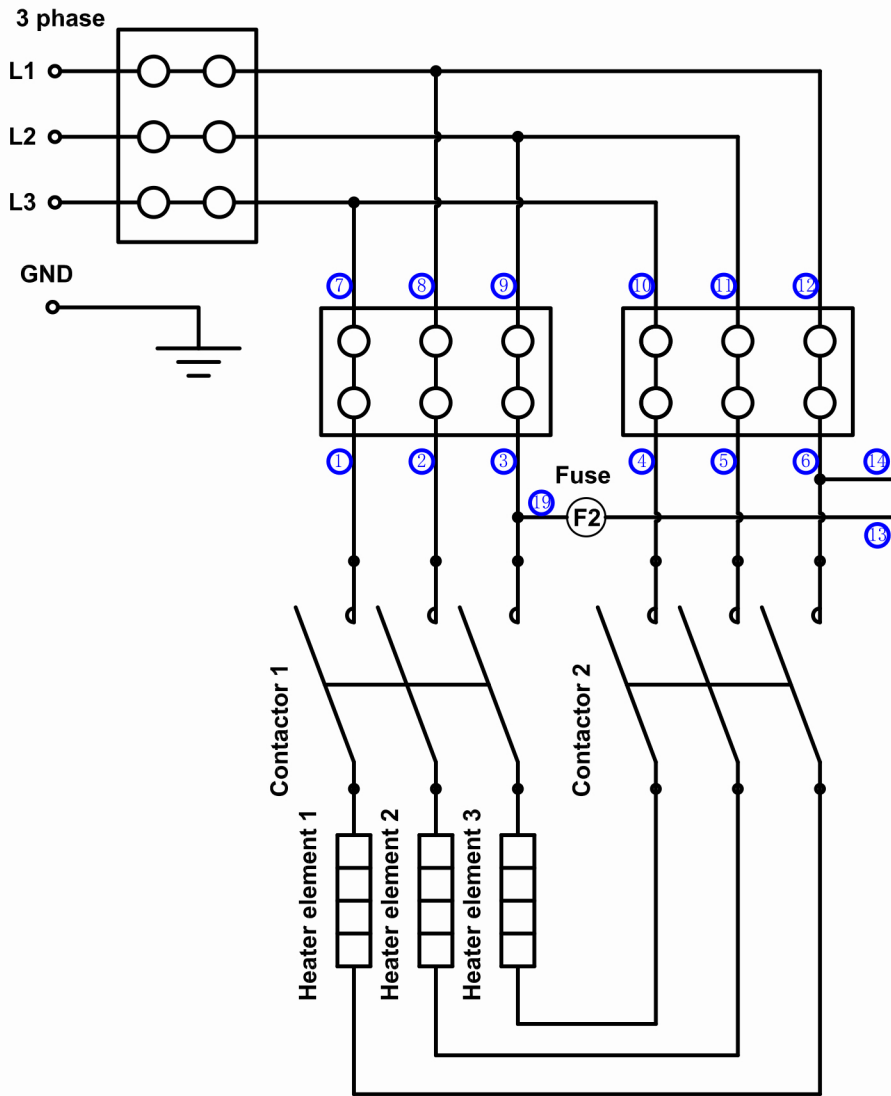


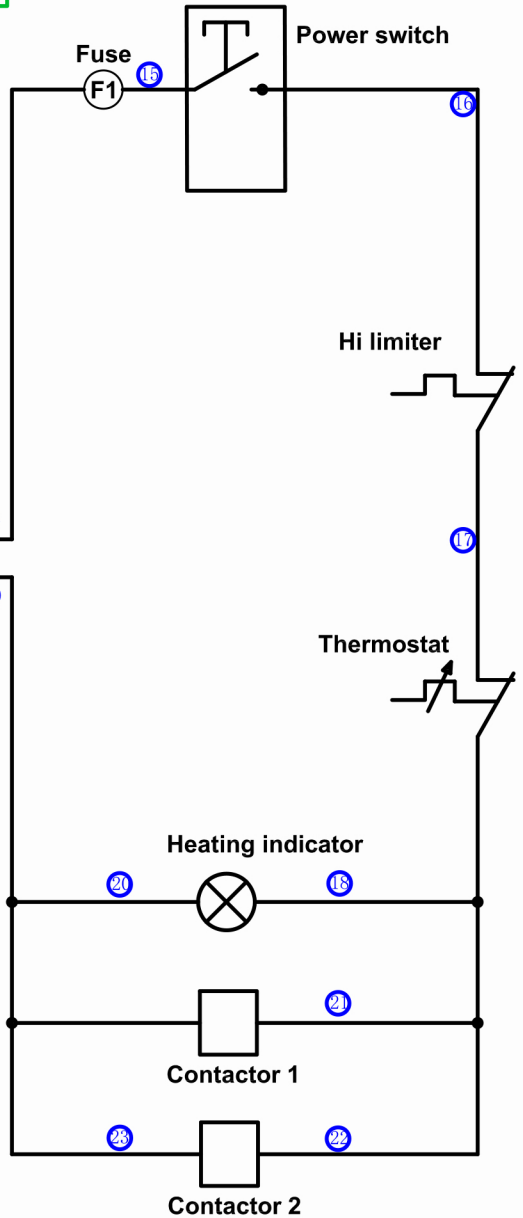

- Note:
1. USE COPPER WIRE ONLY FOR ELECTRICAL SUPPLY CONNECTIONS.
 2. ALL ELECTRICAL INSTALLATION AND SERVICING MUST BE PERFORMED BY A LICENSED ELECTRICIAN.
 3. USE WIRE RATED FOR A MINIMUM TEMPERATURE OF 105°C (221°F).