

USER MANUAL

DOUBLE SPINDLE MILKSHAKE MACHINE



Models: PDM2



USR Brands, Inc.

Phone: 800-764-1172 | www.usrestaurant.com | sales@usrestaurant.com

Before operating this unit, please read instructions completely.

Important Safeguards

1. Read the instructions carefully.
2. To protect against risk of electrical shock, do not put the appliance in water or other liquid.
3. Adult supervision is quite necessary when the appliance is used by or near Children.
4. Unplug the power cord from the wall outlet when the appliance is not in use, before putting on or taking off parts , and before cleaning other than washing the container.
5. Never touch moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Call service at once for possible replacement, test and repair, electrical or mechanical adjustment.
7. Do not use outdoors.
8. Do not let the power cord hang over the edge of a table or counter, or get in contact with hot surfaces.
9. Keep hands and utensils out of the container during operation to prevent the possibility of severe personal injury and/or damage to the blender. A rubber scraper may be used, but only when the blender is not running
10. Please take off the cup after you make sure the blending blade is stopped entirely.

Brief Introduction

- High power industrial motor, special cup for better mixing.
- High quality durable blades.
- Stainless steel blend cup.

IMPORTANT: Never operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any way. Call repair service or Professional at once for possible replacement, testing and repair, electrical or mechanical adjustment.

Operation Instruction

> Milk

- 1) Add some materials: water, sugar and pure milk (powder milk).
- 2) Put the blend cup on the bracket of the blender (milk shake machine) after putting all well the materials inside the cup.
- 3) Connect the electric power source, turn on the switch.
- 4) The mix is fine blended after about 5 seconds.

Attention: when putting materials, please have the proper capacity of water.

Features

- Strong and durable motor, high rotating speed, safe switch.
- Blending for powdered milk, sugar, pure milk, coffee, etc.
- Suitable for commercial and domestic use.
- Switch: “ I ” “ II ” is on, “ 0 ” is off.

Attention

- Never place any metallic materials inside the cup, such as: knives, forks, spoons, etc.
- Please make sure to power off first before taking out the cup for cleaning in order to prevent danger.
- Never use this device for cutting something in pieces or blending any solid food insoluble in water.
- Please make sure the container is safely connected and fixed with the machine first before starting operation.
- During operation because of the high speed of motor, make sure to hold the top

cover with your hand.

- During operation, please put correct materials in the cup to prevent from overflow while blending.
- When you would like to pour out the food, please turn off the power source firstly, and take off the cup when the motor is NOT running.
- Please pay attention all the time not to touch the Switch carelessly before or after the unit's operation.

Maintenance

When maintaining or cleaning, please make sure the outlet is unplugged, and the switch is set to the "off" position.

Please clean the cup using a sponge or cloth carefully, and take it for airing.

Please clean the motor base and bearing by dry cloth (NEVER use water). In case you have to wipe please do it after cleaning by using a neutral lotion.

Applicable materials

- a. Materials soluble in water.
- b. Some soft and small legume

Trouble-shooting

When the unit is non-operational please check:

1. Whether the outlet is unplugged?
2. Whether the fuse or automatic switch is dropped off?
3. Whether the unit is powered off?

If the unit is still non operational, please contact a service center and do not attempt to repair by yourself.

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!