

# USER MANUAL

## FULL-SIZE ELECTRIC COUNTERTOP BAIN MARIE FOOD/SOUP WARMER



**Models:**PFW500, PFW500-NT



USR Brands, Inc.

Phone: 800-764-1172 | [www.usrestaurant.com](http://www.usrestaurant.com) | [sales@usrestaurant.com](mailto:sales@usrestaurant.com)

## Operating and Maintenance

- Plug unit into correct electrical socket.
- Use with WET HEAT ONLY. Add water in the stainless steel container. Never overfill with water. Remove any excess water immediately.
- The temperature control should be set between 1 and 3 and always operate the appliance at the lowest setting to maintain correct serving temperature. Hold at high temperature when setting between 3 and 5.
- A neon light will glow when the unit is turned on. Turn the dial to 0 to switch off. Unplug from the wall socket to isolate the appliance from the electrical supply.
- Never move or carry the appliance when unit is switched on, or containing hot soup or food.
- Spilled soup or food should be removed immediately from all exterior surfaces. The stainless steel units should be wiped over with a damp soapy cloth.
- Ensure unit is unplugged when not in use, when filling and when being cleaned.
- The appliance must not be cleaned with a high pressure jet.

**IMPORTANT-----NEVER IMMERSE THE APPLIANCE IN WATER AS DAMAGE TO THE UNIT WILL RESULT AND THE GUARANTEE WILL BE VOIDED.**

**WARNING THIS APPLIANCE MUST BE EARTHED.**

**DO NOT OPERATE THE APPLIANCE EMPTY.**