
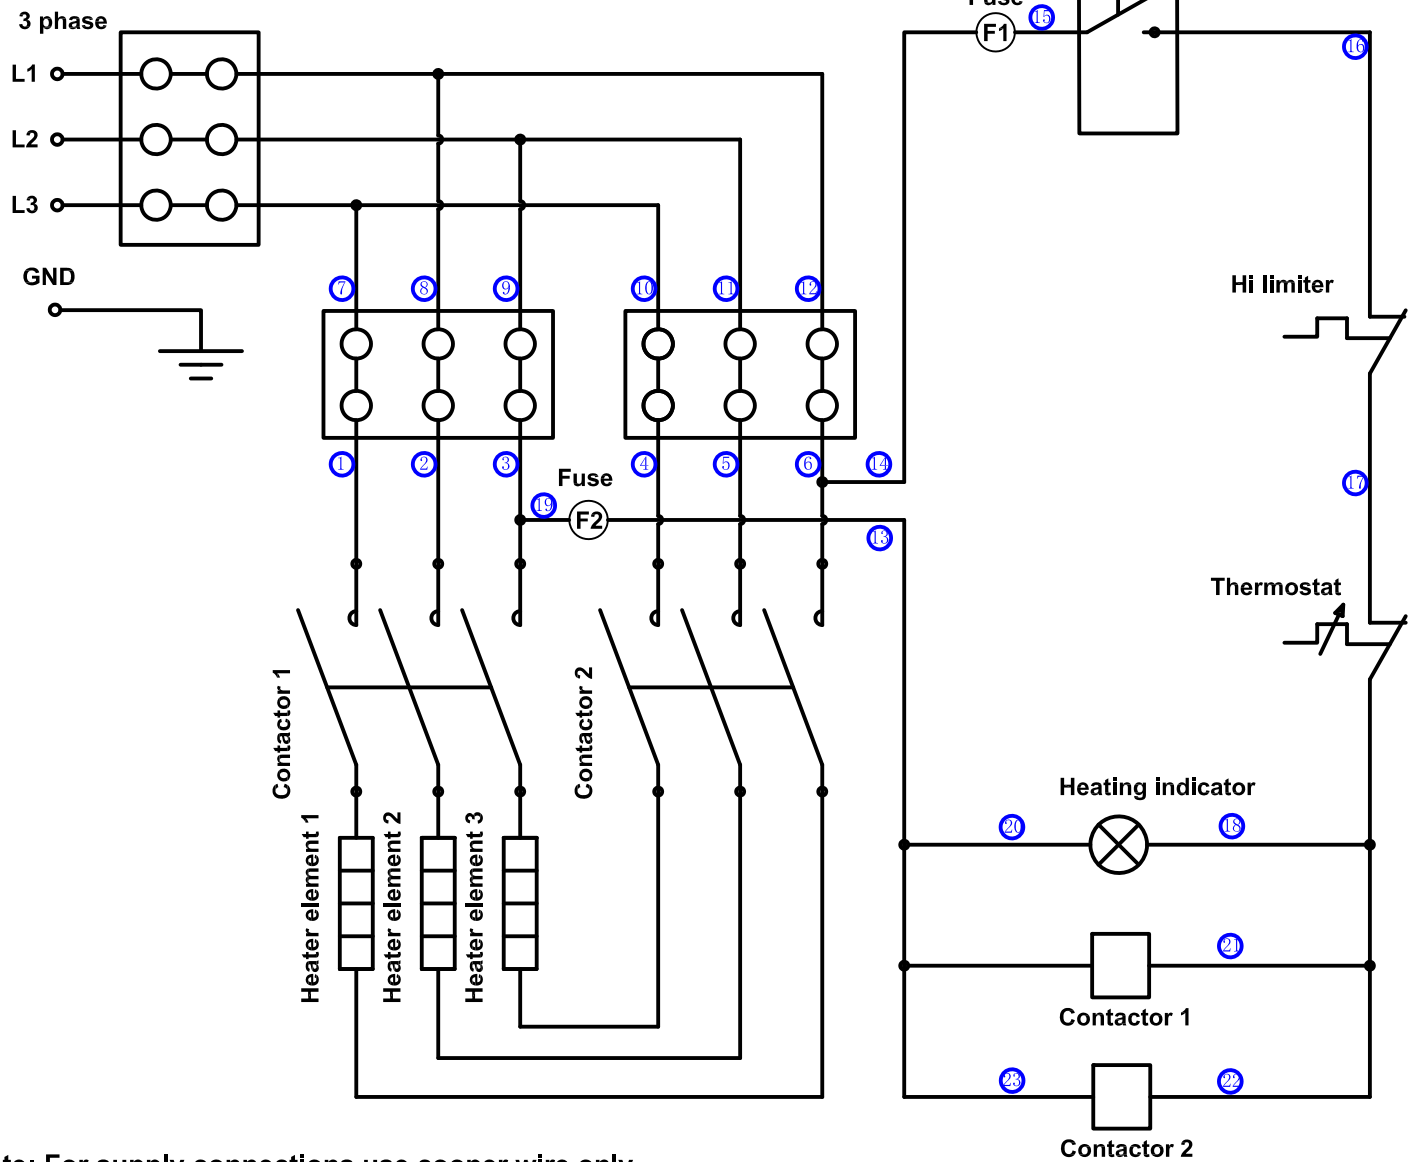


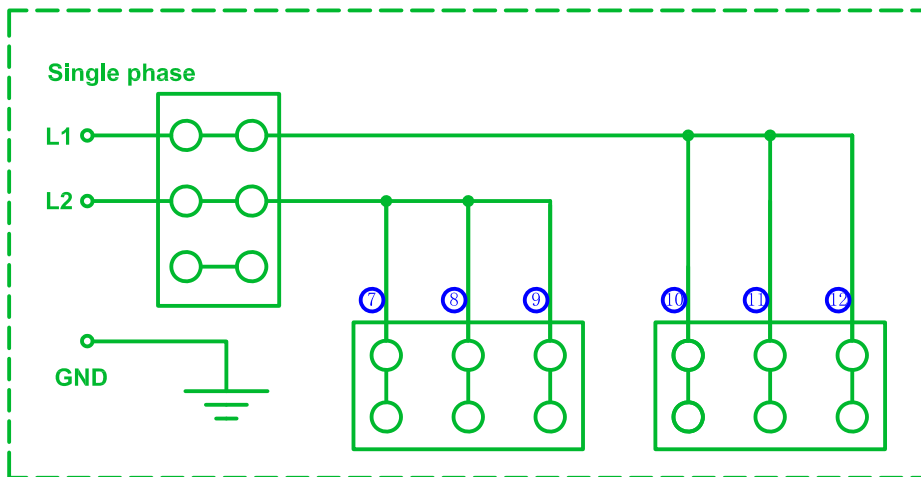

Note: For supply connections use cooper wire only.
 Suitable for at least 105°C(220°F) Use gauge shown or larger.
 Periodically inspect cable and plug, if provided, before using machine.
 Servicing should be performed by qualified and licensed service companies.