

SPACEMAN^{USA}

COMMERCIAL ICE CREAM & FROZEN BEVERAGE EQUIPMENT

MACHINE MANUAL



MODEL SM-6236H

SOFT SERVE - COUNTERTOP - ONE FLAVOR

Customer Service

Sunday – Saturday
8 AM – 5 PM Mountain

Toll-Free: +1 (888) 610-5520
Local: +1 (720) 328-1020

service@spacemanusa.com

Spaceman USA, LLC

226 Commerce Street
Suite B
Broomfield, CO 80020

Sales and Product Information

Monday – Friday
8 AM – 5 PM Mountain

Toll-Free: +1 (888) 610-5520
Local: +1 (720) 328-1020

sales@spacemanusa.com
info@spacemanusa.com

INTRODUCTION

WELCOME TO YOUR MACHINE:

Welcome to your Spaceman USA Model 6236H soft serve machine, engineered and designed to provide dependable operation and a consistent, quality product:

- ◆ One-flavor countertop soft serve machine with portion control
- ◆ Digital control system for automatic regulation and maximum customization
- ◆ Approved for dairy and nondairy products
- ◆ Hopper refrigeration to maintain product temperature below 40°F (4°C)
- ◆ Digital viscosity-control system to adjust and maintain product consistency

This machine manual is intended to instruct users on the installation, operation, cleaning, and routine maintenance procedures. Information contained in this manual may be subject to change. Please check online or contact Spaceman USA Technical Support at (720) 328-1020 for continued updates, training, and detailed information about your Spaceman machine.

LOOK OUT FOR THESE ICONS:



WARNING: Denotes an action that WILL cause harm to the operator or machine if performed incorrectly.



CAUTION: Informs the operator of a task that may lead to harm if protocol is not properly performed.



IMPORTANT: Represents a vital mechanical step or note that the user must be aware of.



NOTE: Non-hazard, but pay extra attention.

Green boxes throughout the manual represent instructions for machines with air pumps. Users without air pumps can disregard these boxes.

FOLLOW INSTRUCTIONS TO BE SAFE:



CAUTION: This machine has many built-in safety features to protect the operator while the machine is running.

Be cautious and follow instructions carefully when operating, cleaning, and servicing the machine.

All personnel operating this machine **MUST** read and understand this manual in its entirety. Failure to comply with this manual may damage the machine and cause severe injury to the operator.

TABLE OF CONTENTS

WHAT DO YOU WANT TO DO?

| | |
|--|-----------|
| Learn about the manual | 1 |
| Quickly refresh your knowledge on basic machine operation and parts | 3 |
| Ensure installation requirements | 5 |
| Unpack machine | 6 |
| Perform routine maintenance | 7 |
| Clean | 8 |
| Drain frozen product | 8 |
| Disassemble parts | 9 |
| Wash parts | 11 |
| Assemble parts | 13 |
| Sanitize | 15 |
| Manage frozen product | 17 |
| Add product to machine | 17 |
| Freeze product | 18 |
| Dispense product | 18 |
| Reset machine after freeze-up | 18 |
| Use STANDBY mode for breaks in machine use | 19 |
| Adjust and maintain product consistency | 19 |
| Change product temperature in hoppers | 20 |
| Change date and time | 20 |
| Adjust advanced settings | 20 |
| Troubleshoot problems | 21 |
| View machine specifications, including parts and wiring diagrams..... | 23 |


QUICK OPERATION REFRESH



WARNING: The Quick Operation Refresh is for experienced 6236H operators and for reference **ONLY**. Detailed start-up instructions **MUST** be followed to ensure proper installation, cleaning, and operation of the machine. Failure to do so may result in **severe** damage or injury.

INSTALLATION AND SETUP

1

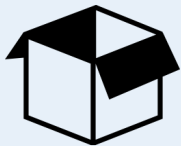


Unpack and inspect machine, parts, and accessories.

2



Place machine in appropriate food preparation area. Comply with all installation requirements (Page 7).

3

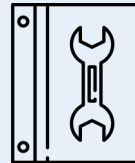

Read and understand ALL safety and standard operating procedures.

CLEANING AND PREPARATION

4



Fully disassemble machine, and prepare parts for cleaning.

5



Thoroughly clean and scrub machine hoppers, cylinders, and all parts.

6



Lubricate and re-assemble all machine parts.

7



Fully sanitize machine.

OPERATION

8



Prepare product in a separate container, and ensure product is thoroughly mixed.

9



Add product to hoppers and prime the cylinder using the prime plug.

10



Turn machine to FREEZE mode, and wait for product to reach frozen consistency.


11



Slightly adjust viscosity setting as necessary to adjust product firmness.

QUICK OPERATION REFRESH

MACHINE PARTS

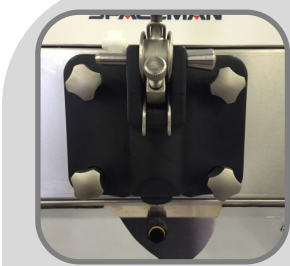

Dispensing Door Assembly (1),
with included parts:



Star Cap (1)



Beater Rod (1)



Gasket (1)



Beater Guide (1)



Draw Handle (1), with
Adjusting Screw (1)



Hand Screws
(4)



Prime Plug (1), with
O-Rings (2)



Retention Pin (1),
with Nut (1)



Draw Valve (1),
with O-Rings (2)



Beater (1)



Scraper Blade Clips (2)



Scraper Blades (2)



Beater Shoes
(1 Left and 1 Right)



Hopper Agitator (1)
(if included)



Drive Shaft (1)



Drive Shaft Gasket (1)



Hopper Lid (1)



Air Tube (1) and Cap (1)



O-Ring Removal Tool (1)



Brush Kit (1)



Internal Drip Tray (1)



Front Drip Tray (1), with
Splash Shield (1)



Air Pump Assembly
(if included)

INSTALLATION REQUIREMENTS

ELECTRICAL REQUIREMENTS

In the United States, it is required that this machine be installed in compliance with the National Electrical Code (NEC), ANSI/NFPA 70-1987 to practically safeguard persons and property from hazards arising from the use of electricity. The unit must be installed into a properly grounded receptacle for the cord and plug provided. The machine is labeled with detailed electrical specifications. Refer to the wiring diagrams for the correct power connections.

REFRIGERANT REQUIREMENTS

Spaceman USA requires that only the specified refrigerant be used in your machine. Alternative refrigerants may cause damage to the cooling system and/or prevent the machine from operating at optimal performance. If you require an alternative refrigerant, please call Spaceman USA Technical Support for a list of compatible alternatives for your compressor.


Main compressor: 1x 6500 BTU, R404A

MACHINE PLACEMENT REQUIREMENTS

CAUTION: The machine must be placed on a level surface away from walls and other objects. Failure to comply will damage the machine and refrigeration components and will void all warranties.

CAUTION: The machine is designed to operate in normal ambient temperatures of 60 to 75°F. Operating in higher ambient temperatures will result in degraded performance.

- ◆ Place on a flat, level, and solid surface fitted to the machine dimensions.
- ◆ Ensure a minimum 6-inch clearance on all sides, front, and back.
- ◆ Completely clear area of dust, grease, and airborne particles.
- ◆ Place away from hot equipment such as stoves, frying baskets, ovens, etc.

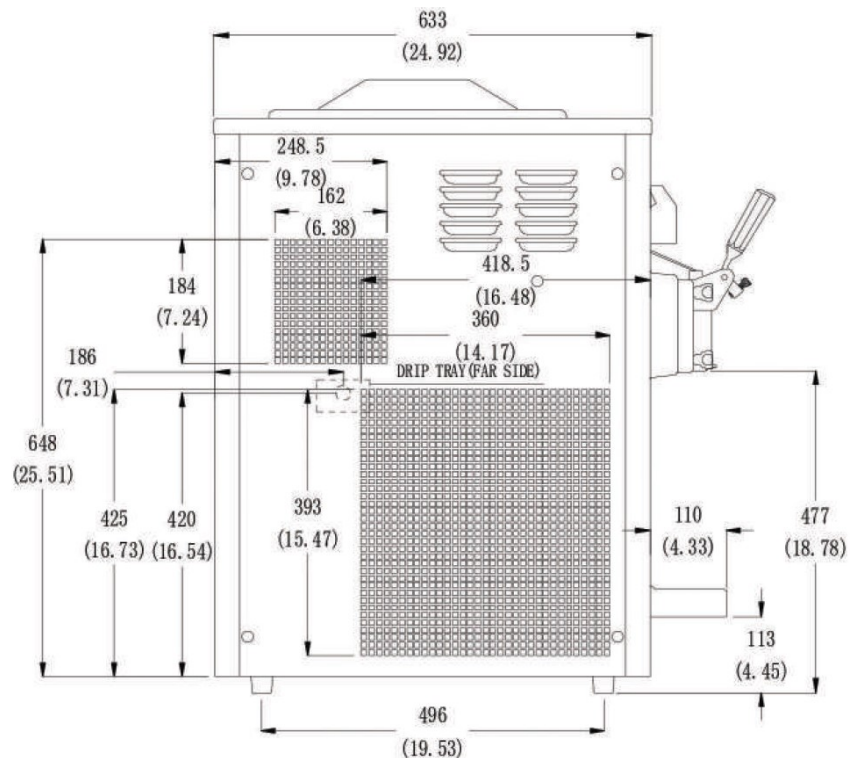

1. UNPALLETIZE MACHINE

Unpalletizing requires lifting.



Two or more personnel should remove the machine from its packaging and place it in its final operating location.

Failure to do so may result in severe injury or damage.

1. Cut packing straps, and remove cardboard lid and outer sides from the pallet. **DO NOT** cut cardboard.
2. Remove plastic wrapping around machine.
3. Cut stabilizing straps, being careful not to scratch or dent the machine panels.
4. Prepare the table or stand that the machine will be placed on.
5. If the table or stand has casters, lock all casters prior to setting the machine on top.
6. Place the machine on top of the stand, countertop, or table.
7. Place the machine in its final location according to the Installation Requirements (Page 5).

2. CHECK FOR SHIPPING DAMAGE

Inspect the machine for any shipping damage. If you find any, contact Spaceman USA Technical Service immediately after unpalletizing. Our technicians will help you assess the damage and determine the appropriate action prior to accepting the delivery.

3. UNPACK AND INSPECT PARTS

Refer to the detailed parts diagrams on the back pages if necessary.

1. Remove all packaged parts and accessories from your machine.
2. Organize items on a clean table or operating area using the checklist below.

- Hopper Lid
- Front Drip Tray + Splash Shield
- Dispensing Handle
- Retention Pin with Nut
- Start-Up Kit
- Brush Kits (1 Large and 1 Small)
- Machine Manual

3. Inspect for damage immediately upon unpacking, and call Spaceman USA Technical Service if you discover any damaged or missing parts.
4. Clean and properly lubricate machine parts prior to machine operation.

After unpacking and inspecting the parts, you are ready to disassemble the machine and prepare for the first operation. **Read about Routine Maintenance (Page 7) carefully prior to disassembling your machine for the first time.**

ROUTINE MAINTENANCE

ROUTINE MAINTENANCE OPERATIONS:

- ◆ **Clean and Lubricate** Daily
- ◆ **Replace Wearable Parts** Every 1 to 3 months*
- ◆ **Internal Cleaning** Quarterly**

* Based on machine usage and cleaning intervals; a Tune-Up Kit is available with all wearable parts (O-rings, gaskets, etc.) except scraper blades

** Based on cleanliness of location and proximity to powder-based machines

For optimal machine performance and many years of efficiency and reliability from your machine, Spaceman USA recommends cleaning and sanitizing the machine and its parts **daily**. The machine comes equipped with a brush kit specifically designed to efficiently and properly clean the machine.



Tune-Up Kit



WARNING: If this is the first time operating the machine, you **MUST** clean and sanitize **ALL** parts prior to running the machine.



IMPORTANT: Cleaning and sanitizing schedules are governed by state or local regulatory agencies and **MUST** be followed accordingly. Routine maintenance **MUST** be performed a minimum of once every three days.



CAUTIONS:

- ◆ Do **NOT** run the machine without properly lubricating required parts.
- ◆ Do **NOT** clean the machine with abrasive or toxic chemicals and cleaners. Doing so may cause damage to the stainless steel material.
- ◆ **ONLY** use Spaceman-USA-included cleaning brushes and lubrication.
- ◆ **NEVER** use metal objects to clean or operate the machine.
- ◆ **ALWAYS** replace wearable parts a minimum of every 3 months.
- ◆ **ALWAYS** prime machine prior to operating.
- ◆ **ALWAYS** inspect parts for excess wear and damage.



NOTE: Additional brushes, lubrication, wearable parts, and tools can be purchased from Spaceman USA to ensure proper maintenance. Extra wearable parts (except scraper blades) are found in the Start-Up Kit.

CLEANING: 1. DRAIN PRODUCT




NOTES: To expedite draining, turn off machine 30 minutes prior to soften product.
To expedite process, keep a bucket nearby to temporarily store removed parts.




CAUTION: Never use warm water when rinsing the machine to prevent damage.

1. Remove hopper lid, air tube, and (if present) agitator; *if machine has air pump, do not disconnect air tube*
2. Place a bucket or other container below dispensing assembly
3. Turn power switch to ON
4. Press RESET button; press WASH button
5. Move draw handle to OPEN position (DOWN); CLOSE draw handle (UP) when product flow slows significantly
6. Press RESET button to pause wash cycle
7. Remove product and dispose or refrigerate it
8. Fill hopper with one gallon of COOL water
9. Use cool water and the large brush to scrub the sides and bottom of the hopper; *be VERY careful not to damage the low-mix sensor in the hopper*
10. Place a bucket or other container below the dispensing assembly
11. Press WASH button
12. OPEN draw handle to drain water and remaining product; CLOSE when finished
13. Use the small brush kit to clean inside the feed tube at the bottom of the hopper; *if machine has air pump, this step is not necessary*
14. Press RESET to pause wash cycle
15. Repeat steps 9 to 15 until water exiting the draw valve is clear and free of product

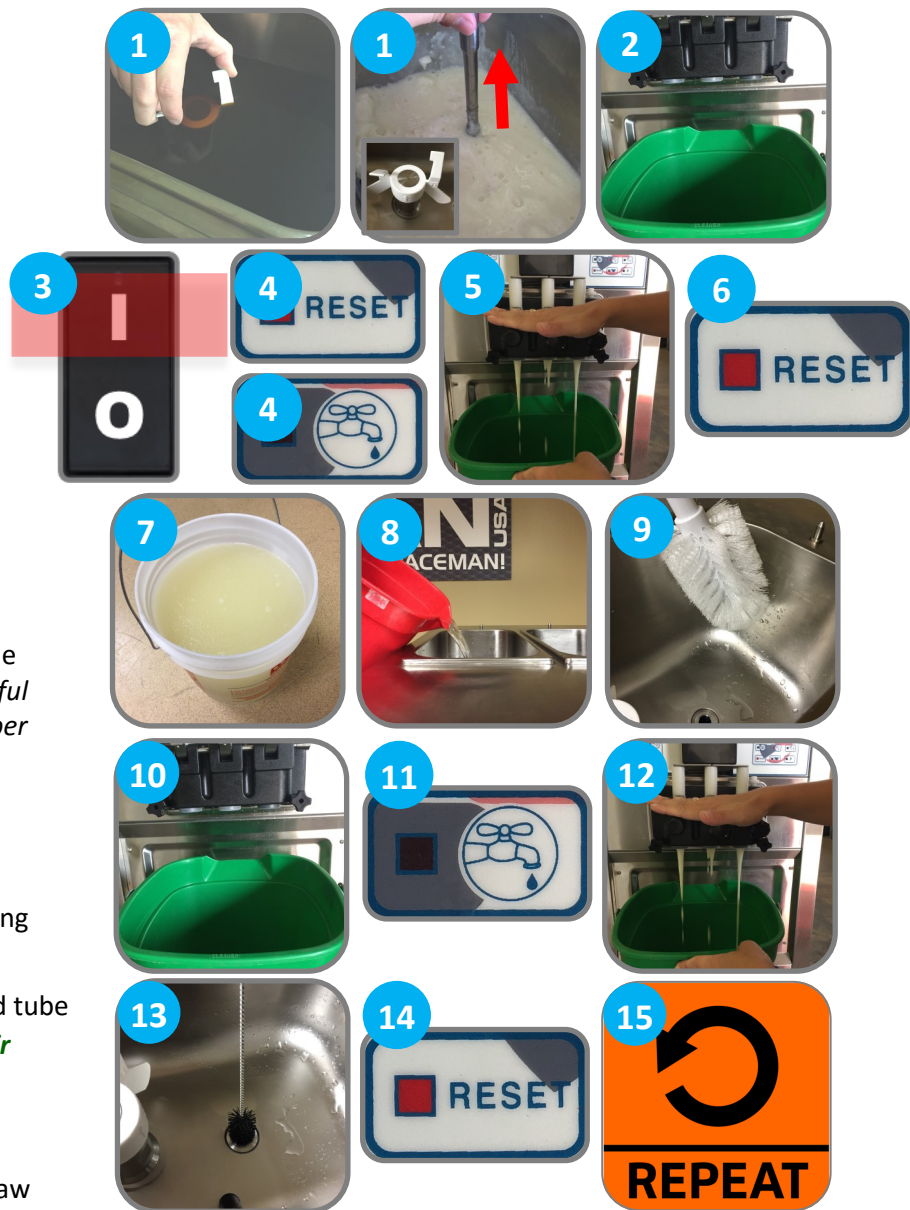

16. If machine has air pump:

- a. Press RESET button
- b. OPEN draw handle (DOWN) for 10 to 15 seconds to relieve pressure in cylinders

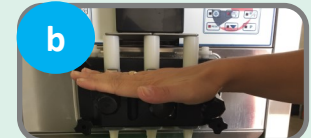

CLEANING: 2. DISASSEMBLE



NOTE: Prepare dishwashing area prior to disassembly, use bucket to temporarily store large removed parts and a small container for O-rings, and have a towel nearby to capture excess water.




CAUTION: Always separate O-rings and gaskets from metal parts to prevent damage while washing.

1. Turn power switch OFF




2. If machine has air pump, disassemble it

- OPEN draw handle to verify zero pressure in cylinder**; twist air tube connector to unlock and disconnect air tube
- Take air tube apart completely; air tube has O-rings (3), connectors (2), and check valve (1)
- Push in and rotate air pump 1/4 turn clockwise; pull to remove
- Rotate suction tube to unlock and remove suction tube, spring, and stopper out of air pump; *watch that spring doesn't fly out*
- Take suction tube apart completely; suction tube has O-ring (1), spring (1), and stopper (1)
- Unscrew bolts on air pump housing; separate air pump cover from shell
- Remove gears and O-ring from shell

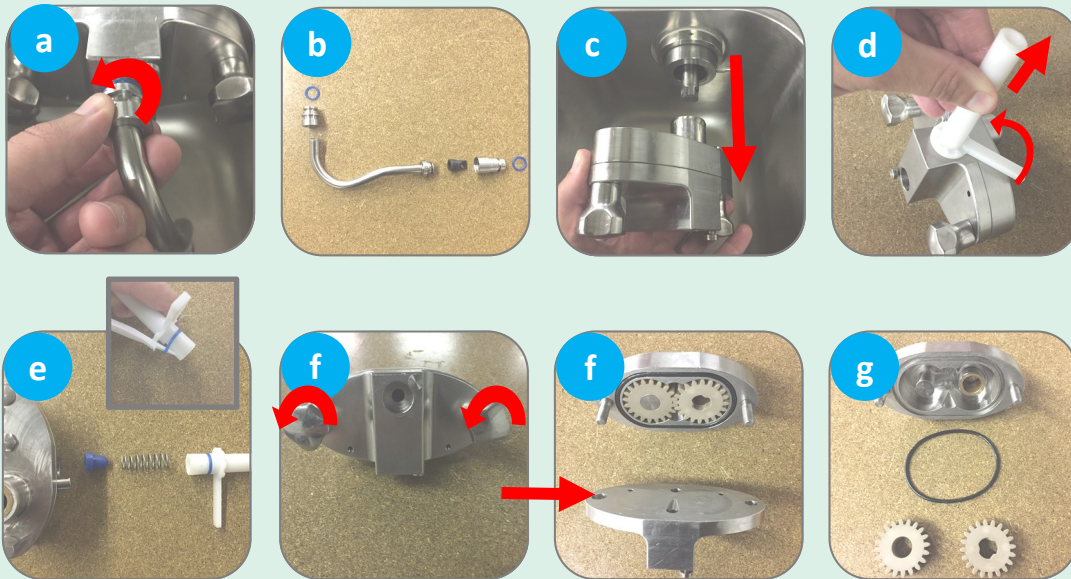

3. Remove dispensing door




- Remove dispensing-door hand-screws (4)
- Remove dispensing door assembly from cylinder

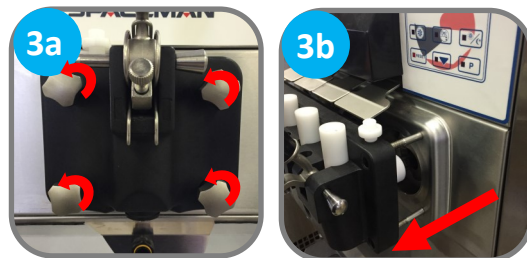

CLEANING: 2. DISASSEMBLE

4. Disassemble dispensing door

- Remove beater guide from door assembly; remove gasket from door assembly using O-ring removal tool
- Remove prime plug from door assembly; remove O-rings (2) from prime plug using O-ring removal tool
- Unscrew and remove retention nut; remove retention pin
- Remove draw handle, pushing down first to pop up draw valve, then pulling out
- Remove draw valve, *twisting while removing to prevent damage*
- Remove O-rings (2) from draw valve using O-ring removal tool
- Rotate star cap so that tab is accessible; snap off star cap

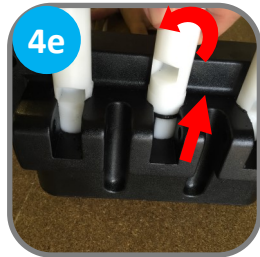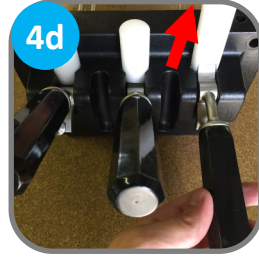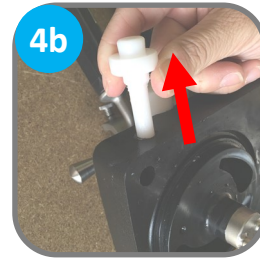

5. Disassemble beater assembly and drive shaft

- Remove beater assembly from cylinder
- Remove scraper blades (2) from beater assembly; separate scraper blade clips (2) from scraper blades
- Pull off beater shoes (2)
- Remove drive shaft from inside cylinder using a dry towel; separate gasket from drive shaft



NOTE: If you experience assembly difficulty with drive shaft, Spaceman offers a specialized removal tool for purchase.



6. Remove internal drip tray and front drip tray + splash shield



CLEANING: 3. WASH ALL PARTS

CAUTION: Never wash parts in a dishwasher. Always hand-wash components with nontoxic, food-safe cleaners.

1. Verify power switch is in the OFF position
2. Use the large brush and cool water to thoroughly clean inside the cylinder; *be sure to scrub the back of the cylinder and verify the cylinder is free of ALL product*
3. Thoroughly clean and dry the rear of the cylinder with the supplied black brushes and a clean, dry towel
4. Gently clean and wipe down the outside of the machine
5. Carefully and thoroughly wash all parts removed from the machine using supplied brushes, sponges, and clean towels; *if machine has air pump, be sure to include all air pump parts in cleaning*
6. When cleaning the dispensing door assembly, clean the priming port with a small brush
7. Carefully and thoroughly clean all gaskets and O-rings removed from the machine; *be sure to wipe gaskets and O-rings to remove excess lubricant*
8. Verify all parts are clean and free of all food product prior to re-assembling machine

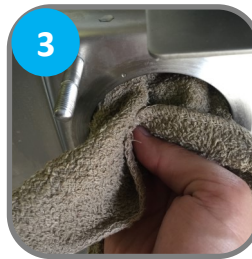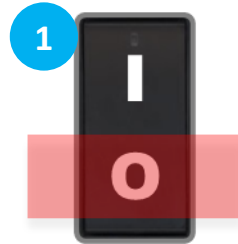

CLEANING: 4. ASSEMBLE



CAUTION: Never force the installation of any parts. All parts fit correctly without force. If parts don't seem to fit, remove all parts and repeat assembly.

1. Verify power switch is in the OFF position



2. Install drive shaft



- Place drive shaft gasket on drive shaft
- Seal gasket open space with Spaceman lubricant, extending onto drive shaft and *avoiding the top square part*



- Insert drive shaft into rear shell bearing at the back of the cylinder, and turn it until the key engages firmly into the socket (when inserted correctly, the drive shaft will no longer turn 360°)




3. Install beater assembly

- Attach beater shoes (2) onto beater; when properly placed, neither shoe overhangs beater edge
- Install scraper blade clips (2) onto scraper blades (2)
- Fit scraper blades onto beater
- Insert beater assembly into cylinder, *making sure beater shoes stay in place*; turn assembly until it engages the drive shaft key and no longer turns 360°

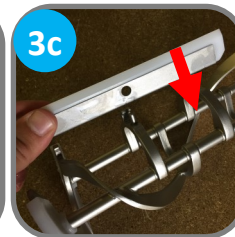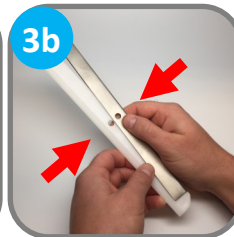

4. Install dispensing door


- Place O-rings (2) on draw valve; place O-rings (2) on prime plug; coat all ring areas with Spaceman lubricant
- Push prime plug into hole on top of dispensing door
- Insert draw valve into dispensing door, O-rings-first
- Set draw handle into slot on dispensing door, with adjustment screw facing down
- Slide retention pin through draw handle; secure with nut
- Snap star cap onto bottom of dispensing door
- Fit gasket into grooves on back of door, flat side out; slide beater guide over beater rod, with flanged edge against the door
- Insert dispensing door assembly into cylinder, beater rod first, pushing handle all the way up as you insert
- Secure door assembly in a cross-pattern using hand-screws (4)

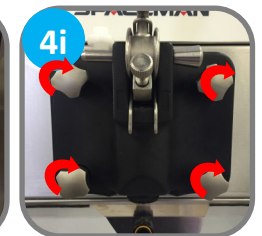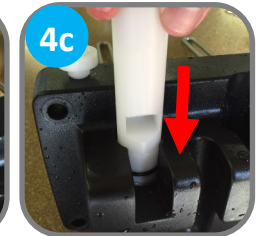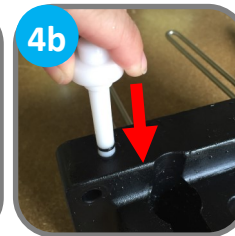

CLEANING: 4. ASSEMBLE

5. If machine has air pump, assemble and install it

- Place O-ring on rear shell, coating with Spaceman lubricant; install gears into shell (they only fit one direction)
- Connect cover and shell, ensuring they fit flush; secure with hand-screws
- Place O-ring on suction tube; lightly lubricate O-ring area
- Place air pump stopper into air pump spring, verifying orientation of stopper in spring; insert into housing **stopper-first**
- Insert suction tube into pump; rotate to lock, and turn to desired overrun setting
- Coat air pump drive shaft with Spaceman lubricant
- Install air pump onto machine:
 - insert at an angle
 - while pushing air pump in, slightly rotate back and forth until the gear engages the air pump drive shaft
 - push in and rotate counter-clockwise to lock in place
- Assemble air tube; air tube has O-rings (3), connectors (2), and check valve (1); lubricate O-ring areas
- If machine will go unused, install air tube into hopper, but do not connect to air pump; otherwise, set air tube aside until after machine has been primed

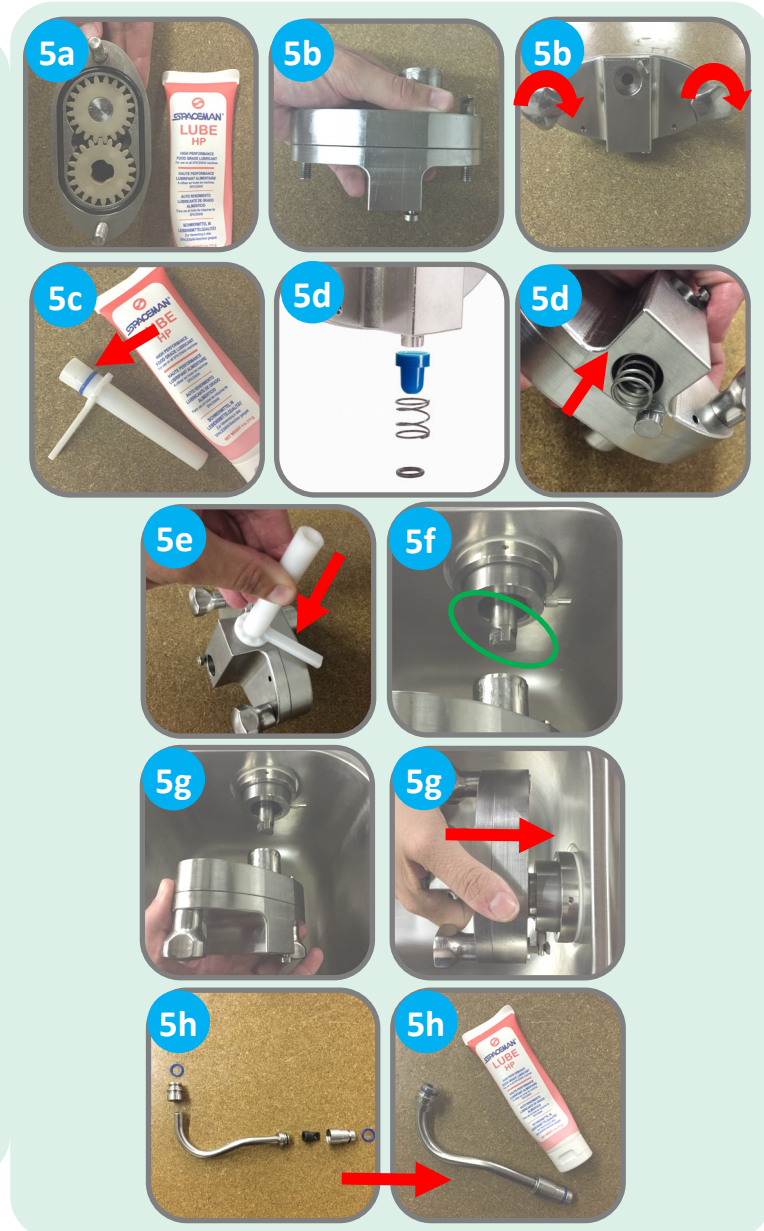

6. Install hopper lid, agitator, and drip trays

- Coat inside of agitator (if present) with Spaceman lubricant and install with arrow pointing up
- Install internal and front drip trays
- If machine will be left unused, install air tube and place hopper lid on top; otherwise, set air tube aside until after machine has been primed



SANITIZATION

IMPORTANT: After sanitizing the machine, DO NOT rinse or touch areas that have been sanitized. Product must be added immediately. If new product will not be added immediately, rinse machine with clean water and loosen door hand-screws to allow cylinder to air-dry. Sanitize machine before using again.

CAUTION: Always use food-grade, no-rinse sanitizer to sanitize. If warm water is required to dissolve sanitizer, allow the solution time to cool before adding to machine.

1. Verify assembly is complete
2. If installed, remove hopper lid and air tube
3. Verify draw valve is in the CLOSED position (UP)
4. Mix a minimum of 2 gallons of food-grade sanitizer in a bucket or container
5. Pour half the food-grade sanitizer solution into hopper
6. Turn power switch ON
7. Press RESET button; press WASH button to begin cycle
8. Allow solution to agitate for 5 to 10 minutes; *NEVER leave machine on WASH for more than 10 minutes*
9. While agitating, gently use a clean brush to scrub and distribute sanitizer solution along hopper walls
10. Place a bucket or container below the draw valve
11. OPEN the draw valve (DOWN) and drain solution from the machine
12. Press RESET button to stop cycle



FROZEN PRODUCT OPERATION




ADD PRODUCT TO MACHINE



NOTE: The mix-low lights illuminate **RED** when a hopper is low on product mix and automatically de-illuminate when machine is filled.



1. Verify machine has been recently sanitized (within 1 hour); if machine has not been recently sanitized, verify door hand-screws are tight, and perform sanitizing steps (Page 15)
2. Thoroughly mix and prepare at least 2 gallons of product according to manufacturer instructions; mix should be cool and smooth (free of large chunks)
3. Place bucket or large container below draw valve
4. Pour 0.25 gallons of product into hopper
5. If machine has air pump, *do not* fill product over small air inlet holes on the bottom of the air pump
6. OPEN draw handle (DOWN); sanitizer will start to flow out draw valve
7. Once sanitizer has been purged from the machine and a steady stream of product is flowing from the spout, CLOSE draw handle (UP)
8. Pour remaining product into hopper
9. Raise the prime plug on the top of the dispensing door until flow is 100% product
10. Push prime plug back down
11. If machine has air pump:
 - Press RESET, then press WASH
 - Ensure product is coming out of the large hole near the top of the air pump
 - Press RESET
12. Wash air tube and cap; install air tube in hopper (inlet hole on side of air tube at bottom)
13. Install air pump air tube, inserting air tube into hopper, then rotate and insert air pump connector into air pump; rotate connector to lock in place
14. Replace hopper lid
15. Product is now ready to freeze

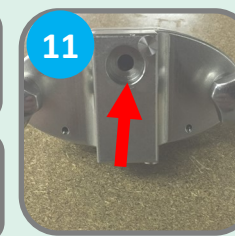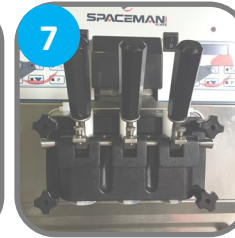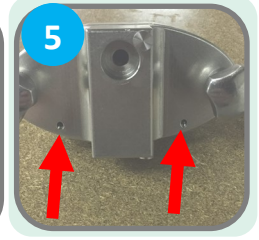

FROZEN PRODUCT OPERATION

FREEZE PRODUCT



CAUTION: *Never* disconnect air pump (if present) with the machine running. If disconnecting air pump, *first* press RESET to stop operations and open draw handles for 10 to 15 seconds to relieve pressure in cylinder.

1. Verify cylinder is full of mixed product and primed
2. Press FREEZE button
3. The motor will begin to agitate the product, and the cooling system will begin to freeze the product
4. Freezing product takes approximately 10 minutes
5. When product reaches the set viscosity, it is ready to dispense (viscosity can be changed in the Settings menu, Page 19)

DISPENSE PRODUCT



CLOSED



OPEN



1. OPEN draw handle (DOWN) until desired amount is dispensed
2. CLOSE draw handle (UP) when finished dispensing

Adjustment screws below draw handles control dispensing speed.

- Tighter (clockwise) reduces speed
- Looser (counter-clockwise) increases speed

MACHINE POWER RESET

IMPORTANT: Machine shuts down automatically if cylinder experiences freeze-up (usually because the viscosity is set too high for the selected product) to prevent motor damage. Use the green reset button to return the machine to normal operation.



Proper Machine Reset

1. Switch power switch OFF
2. Press green reset button on side or back of machine
3. Wait 15 to 20 minutes; switch power ON
4. Press RESET, then WASH button on front
5. Observe machine performance and return to normal use if functioning properly



CAUTION: If machine makes any abnormal noise during reset, immediately switch power OFF and contact service




NOTE: If machine doesn't turn on, turn power OFF, wait 30 minutes, and repeat steps 1 to 5. If problem persists, contact service team.

FROZEN PRODUCT OPERATION

STANDBY MODE

IMPORTANT: When the machine will **NOT** be utilized for several hours, place it in **STANDBY** mode to conserve electricity and reduce product loss.

In **STANDBY**, product remains below 41°F in both the cylinder and hopper, but will **NOT** be frozen.

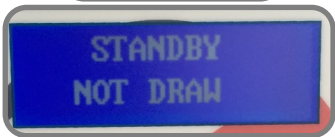

To enter **STANDBY** mode:

- ◆ Press **RESET** button, then **STANDBY** button.
- ◆ Display reads **STANDBY** when machine is in **STANDBY** mode.

To exit **STANDBY** mode:

- ◆ Press **RESET** button.
- ◆ Machine is ready for a new mode selection.

NIGHTLY STANDBY PROCEDURE

Machines without air pumps experience the best-quality product after leaving machine in **STANDBY** overnight using the following procedure.

Store closing:

1. With machine in **FREEZE** mode, remove air tube
2. Clean air tube and insert into machine upside-down (inlet hole on the side of the air tube at the top)
3. Confirm product is above low-mix line in hopper
4. Press **RESET**, press **STANDBY**

Store opening:


5. Open draw handle to draw 6 to 8 oz. of product; discard product
6. Press **RESET**, press **FREEZE**
7. Wait until machine finishes freeze cycle and motor stops turning
8. Remove and clean air tube
9. Insert air tube into machine with correct orientation (inlet hole on the side of the air tube at the bottom)
10. Machine is ready for normal operation

ADJUST PRODUCT CONSISTENCY

IMPORTANT: Make only small adjustments to viscosity setting; allow at least 10 to 15 minutes between adjustments to evaluate product firmness. Viscosity setting **should not** need continuous adjustment and should be set between 1.75 and 3.25, with 2.50 a good starting place.




Press **RESET** to stop machine functions. Press and hold **RESET** until display shows settings (viscosity is the first setting shown). *If you scroll past the viscosity setting, hit **RESET** until it comes back around.*

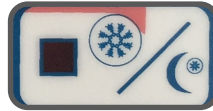

Press **STANDBY** to increase viscosity (more firm).



Press **P** to decrease viscosity (less firm).

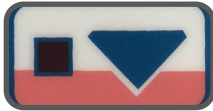

Press and hold **ARROW** for 3 seconds to save changes.



Press **RESET** to return to normal machine operation.



Press **FREEZE** to return to freezing operation.

MAINTAIN PRODUCT CONSISTENCY

Machines without air pumps can experience product consistency changes if they go unused for an extended period of time. Product may become icy or dense if left in the freezing cylinder too long, often occurring during a business's longer slow-periods.

What to do: Add air to the freezing cylinder by following the closing/opening procedures in the previous column, **omitting Step 4.**

CHANGE PRODUCT TEMPERATURE IN HOPPER

IMPORTANT: If temperature setting is too cold, product will freeze around the sides of the hopper and potentially cause damage. Hopper temperature should be set above freezing between 37 and 40°F.




Press RESET to stop machine functions. Press and hold RESET until display shows settings. Viscosity is the first setting shown; press RESET again (without holding), and temperature will be next. *If you scroll past the temperature setting, hit RESET until it comes back around.*



Press STANDBY to increase temperature (warmer).



Press P to decrease temperature (cooler)

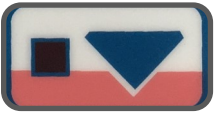

Press and hold ARROW for 3 seconds to save changes.



Press RESET to return to normal machine operation.



Press FREEZE to return to freezing operation.

CHANGE DATE AND TIME




Press RESET to stop all machine functions. Press and hold RESET until display shows settings.

Viscosity is the first setting shown; press RESET again twice (without holding) to reach the date/time setting.

If you scroll past the date/time setting, hit RESET until it comes back around.



Press FREEZE to toggle cursor between date/time fields. Once highlighted, a field can be changed.

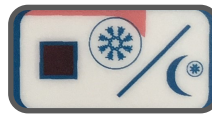

Press STANDBY to increase highlighted number.



Press P to decrease highlighted number.



Press and hold ARROW for 3 seconds to save changes.



Press RESET to return to normal machine operation.



Press FREEZE to return to freezing operation.

ADJUST ADVANCED SETTINGS

There are several advanced settings that can be configured from the machine displays. Call Spaceman Technical Support to adjust advanced settings.

TROUBLESHOOTING

PROBLEM: HOPPER ISN'T COLD ENOUGH

Probable Cause

1. Warm product was recently added
2. Hopper temperature setting is too high
3. Temperature offsets need adjustment

Remedy

1. Allow at least 1 hour after adding new mix for hopper temperatures to stabilize
2. Adjust hopper temperature warmer (Page 20)
3. Call Spaceman Technical Support

PROBLEM: HOPPER IS FREEZING

Probable Cause

1. Inadequate mix in hopper
2. Hopper temperature setting is too low

Remedy

1. Ensure hopper is at least half full
2. Adjust hopper temperature warmer (Page 20)

PROBLEM: PRODUCT IS TOO SOFT

Probable Cause

1. Machine isn't cleaned/lubricated adequately
2. Inadequate mix in hopper
3. Improper mixing of product
4. Machine doesn't have adequate ventilation
5. Viscosity adjustment is set incorrectly

Remedy

1. Clean and properly lubricate machine daily
2. Ensure hopper is at least half full
3. Follow manufacturer instructions for mixing product; ensure correct mix ratios
4. Ensure at least 6-in. clearance on all sides
5. Raise viscosity setting as required (Page 19)

PROBLEM: STOP 1—LOW TEMP PROTECT

Probable Cause

1. Inadequate mix in hopper
2. Improper mixing of product
3. Air tube isn't installed correctly
4. Viscosity adjustment is set incorrectly
5. Product is being drawn too quickly

Remedy

1. Ensure hopper is at least half full
2. Follow manufacturer instructions for mixing product; ensure correct mix ratios
3. Clean air tube, ensure proper orientation
4. Lower viscosity setting as required (Page 19)
5. Ensure air tube isn't clogged, allow machine 2 to 3 seconds between servings

PROBLEM: STOP 2—MOTOR OVERLOAD

Probable Cause

1. Viscosity adjustment is set incorrectly
2. Inadequate mix in hopper
3. Improper mixing of product
4. Air tube isn't installed correctly
5. Product is being drawn too quickly

Remedy

1. Lower viscosity setting as required (Page 19)
2. Ensure hopper is at least half full
3. Follow manufacturer instructions for mixing product; ensure correct mix ratios
4. Clean air tube, ensure proper orientation
5. Ensure air tube isn't clogged, allow machine 2 to 3 seconds between servings to recover

PROBLEM: STOP 4—TEMPERATURE

Probable Cause

1. Malfunctioning temperature probe

Remedy

1. Replace temperature probe

PROBLEM: STOP 6—MOTOR AMP

Probable Cause

1. Malfunctioning power board

Remedy

1. Replace power board

PROBLEM: MACHINE IS MAKING NOISE

Probable Cause

1. Improper assembly
2. Wearable parts need replacement
3. Internal cleaning/maintenance required
4. Damaged internal parts

Remedy

1. Stop machine use, drain product with machine powered OFF; clean and inspect parts.
2. Replace wearable parts (including scraper blades) at least once every 3 months
3. Contact Spaceman USA Technical Support
4. Inspect parts carefully for damage, ensure proper assembly; replace as required

PROBLEM: PRODUCT LEAKS EXCESSIVELY INTO INTERNAL DRIP TRAY

Probable Cause

1. Improper or inadequate lubrication of drive shaft gasket
2. Damaged, missing, or improperly installed drive shaft gasket

Remedy

1. Use sufficient food-grade lubricant, and add sufficient lubricant inside drive shaft gasket during assembly (Page 13)
2. Replace drive shaft gaskets every 1–3 months

PROBLEM: PRODUCT LEAKS EXCESSIVELY FROM DISPENSING DOOR SPOUT

Probable Cause

1. Improper or inadequate lubrication of draw valve and draw valve O-rings
2. Cracked, broken, or worn draw valve O-rings

Remedy

1. Use sufficient food-grade lubricant when assembling draw valves (Page 13)
2. Replace O-rings every 1-3 months

PROBLEM: MACHINE SHUTS DOWN AUTOMATICALLY

Probable Cause

1. Cylinders are experiencing freeze-up (usually due to viscosity being set too high for selected product)

Remedy

1. Reset machine (Page 18), and lower viscosity as required (Page 19)

MACHINE SPECIFICATIONS

SM-6236H

SOFT SERVE FREEZER

PRODUCT INFORMATION

| | |
|-------------------------|-----------------------------------|
| Type | Counter Top |
| Flavors | 1 |
| Cooling | Air Cooled |
| Freezing Cylinders | 1x 3.2 L / 3.4 qt |
| Product Mix Hoppers | 1x 15.0 L / 15.9 qt |
| Output (4oz Servings) | 40.0 qt / hr 321 servings / hr |
| Motor | 1x 1.00 HP, 900W |
| Compressor (Main) | 1x 6500 BTU, R404A |
| Compressor (Auxilliary) | 1x 480 BTU, R134A |

FEATURES

| | |
|-----------------------------|----------------------|
| Machine Controls | Single, Digital |
| Refrigerated Hopper | Yes, Digital Control |
| Hopper Agitator | Yes |
| Temperature Display | Yes |
| Standby Mode | Yes |
| Low Mix Indicator Light | Yes |
| Low Mix Indicator Alarm | No |
| Low Temperature Protection | Yes |
| Motor Amperage Protection | Yes, Mechanical |
| High Pressure Protection | Yes |
| Thermal Overload Protection | Yes |



DESCRIPTION

A high capacity, single flavor, gravity feed, countertop soft serve freezer. Capable of producing a variety of products including: Soft Serve, Frozen Yogurt, Ice Cream, Custards, and Sorbets. Digital control system automatically regulates and maintains consistent product quality. Refrigerated hopper and Standby Mode keeps product fresh, even overnight.

CUSTOM OPTIONS

Air Pump, Water Cooled, Heat Treat, Air Chute, Spinner (1 or 2)

ELECTRICAL SPECIFICATIONS

| | Maximum Fuse Size | Min. Circuit Ampacity | Poles (P) Wires (W) |
|--------------|-------------------|-----------------------|---------------------|
| 208-230/60/1 | 1 x 20A | 1 x 14A | 2P / 3W |



Electrical Plug: 1x NEMA L6-20

SIZE SPECIFICATIONS


| | Machine | | Shipping | |
|------------------|---------|---------|----------|---------|
| Weight | 173 kg | 384 lbs | 188 kg | 418 lbs |
| Depth (mm / in) | 633* | 25.0* | 880 | 34.7 |
| Width (mm / in) | 453* | 17.9* | 510 | 20.1 |
| Height (mm / in) | 908 | 35.8 | 1080 | 42.6 |

Shipping Volume: 0.48 CBM / 17.09 CBF

** Machine Requires Minimum 6" Clearance on all sides*

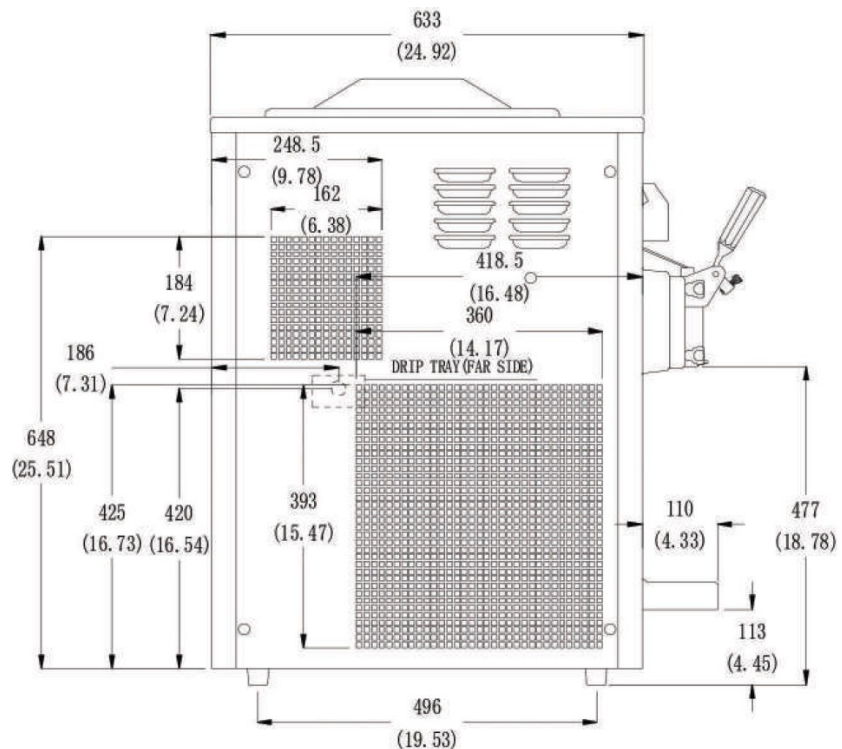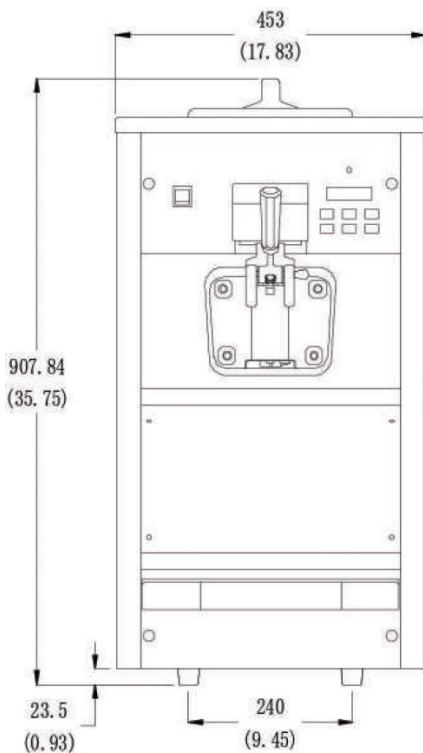


SPECS—EXTERNAL PARTS

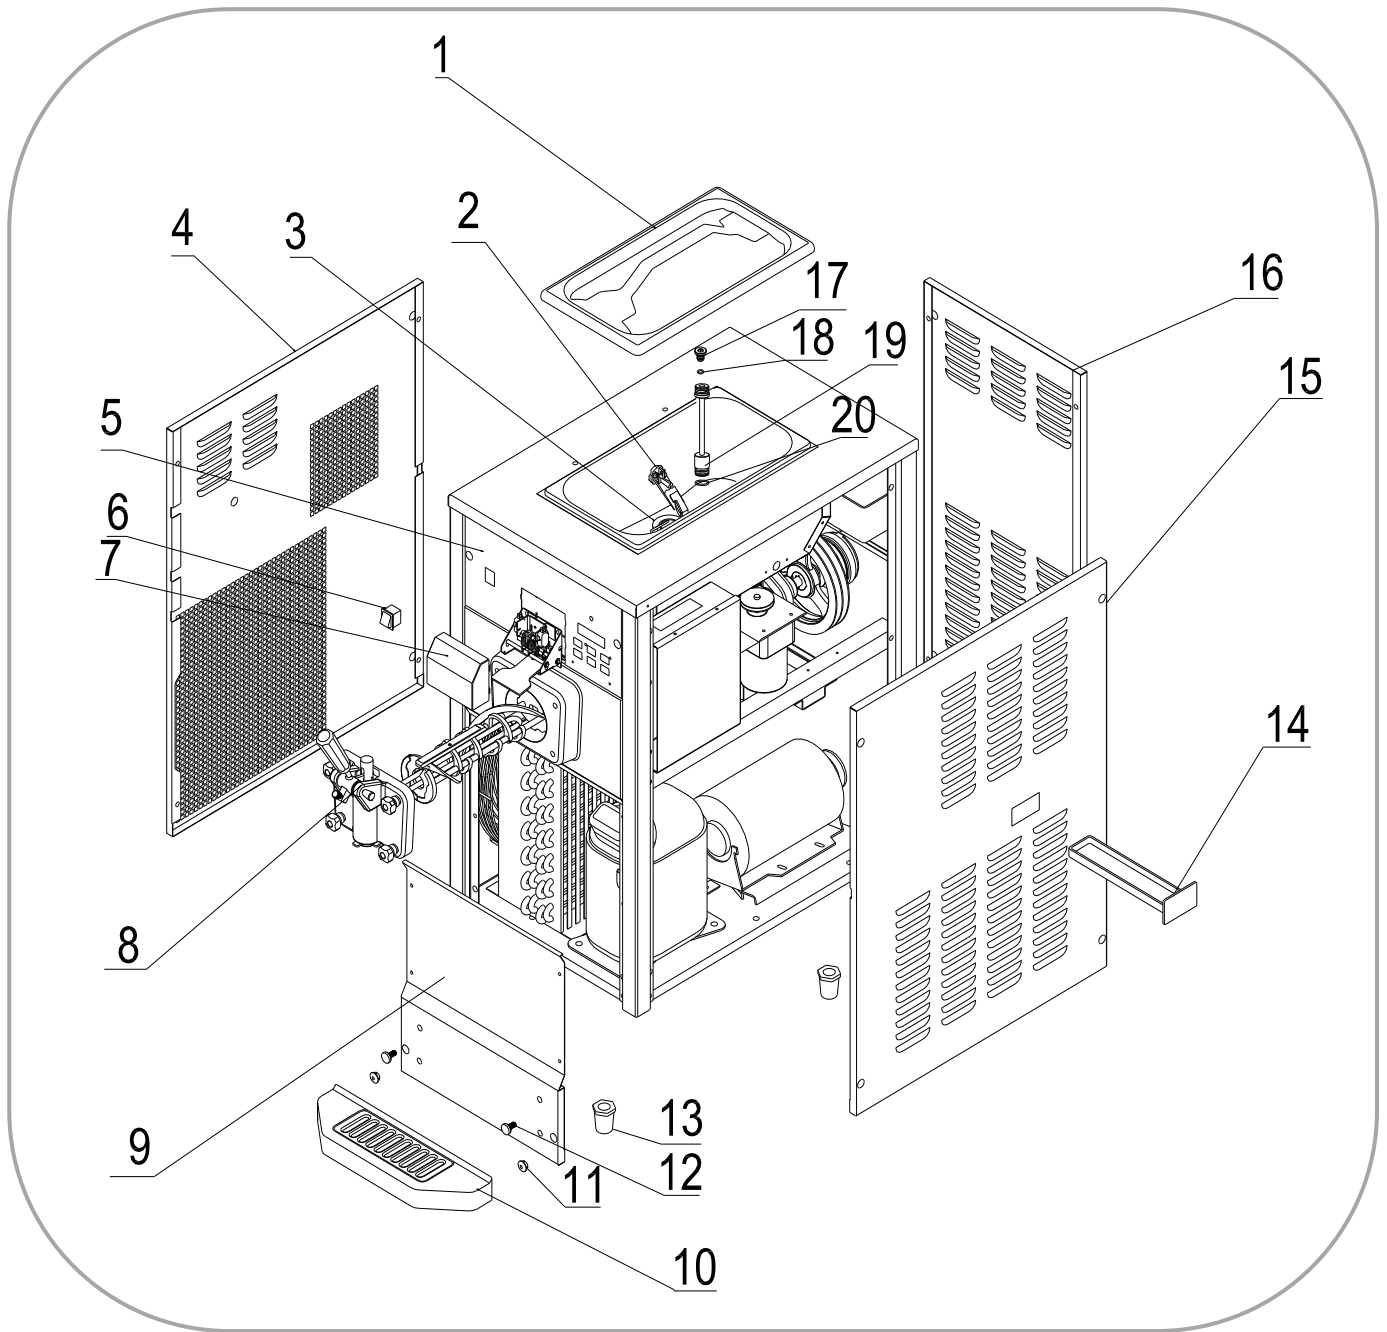


| Item | Part # | Description | Item | Part # | Description | Item | Part # | Description |
|------|---------------|-------------------|------|---------------|--------------------|------|---------------|-------------------|
| 1 | 3.4.03.01.004 | Hopper Lid | 9 | 2.3.4.17.003 | Panel - Front - L | 17 | 2.1.3.23.0001 | Air Tube Cap |
| 2 | 3.1.03.04.009 | Low Mix Sensor | 10 | 3.4.04.01.002 | Drip Tray | 18 | 3.4.08.01.028 | O-Ring - Cap |
| 3 | 2.1.1.23.0001 | Agitator Blade | 11 | 3.4.07.01.001 | Bolt Cover | 19 | 2.1.1.22.0003 | Air Tube |
| 4 | 2.3.4.18.004 | Panel - Left | 12 | 3.6.39.004 | Drip Tray Mount | 20 | 3.4.08.01.002 | O-Ring - Air Tube |
| 5 | 2.3.4.07.003 | Panel - Front - U | 13 | 3.3.05.03.001 | Leg | | | |
| 6 | 3.1.03.03.003 | Power Switch | 14 | 3.4.04.02.003 | Internal Drip Tray | | | |
| 7 | 3.4.07.07.004 | Switch Cover | 15 | 2.3.4.20.007 | Panel - Right | | | |
| 8 | 2.1.1.15.0015 | Dispensing Door | 16 | 2.3.4.13.004 | Panel - Rear | | | |

Dispensing Door and Beater

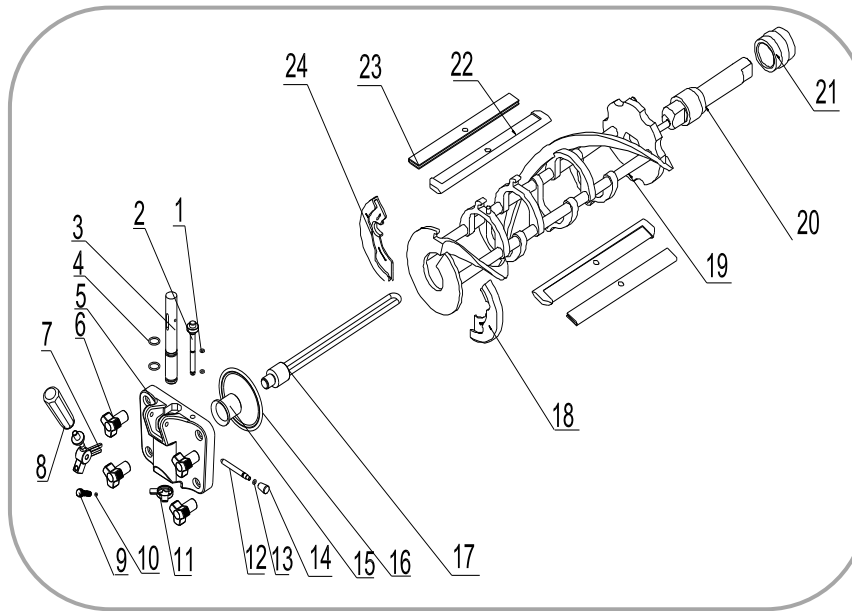


| Item | Part # | Description | Item | Part # | Description | Item | Part # | Description |
|------|---------------|-------------------|------|---------------|---------------------|------|---------------|--------------------|
| 1 | 3.4.08.01.013 | O-Ring - Prime | 9 | 3.6.39.009 | Adjustment Screw | 18 | 3.4.01.02.001 | Beater Shoe - R |
| 2 | 2.1.3.02.0015 | Prime Plug | 10 | 3.4.08.01.012 | O-Ring - Screw | 19 | 2.1.1.10.0001 | Beater |
| 3 | 2.1.3.01.0005 | Draw Valve | 11 | 3.4.05.03.001 | Star Cap | 20 | 2.1.3.25.0002 | Drive Shaft |
| 4 | 3.4.08.01.006 | O-Ring - Valve | 12 | 2.1.3.27.0004 | Retention Pin | 21 | 3.4.07.05.002 | Drive Shaft Gasket |
| 5 | 2.1.3.14.0004 | Dispensing Door | 13 | 3.4.08.01.013 | O-Ring - Retention | 22 | 3.4.02.01.001 | Scraper Blade |
| 6 | 3.4.05.02.007 | Hand Screw | 14 | 2.1.3.27.0025 | Nut - Retention Pin | 23 | 2.3.4.04.002 | Scrape Blade Clip |
| 7 | 2.1.3.26.0005 | Handle Seat | 15 | 3.4.01.03.002 | Beater Guide | 24 | 3.4.01.01.001 | Beater Shoe - L |
| 8 | 3.4.05.01.001 | Dispensing Handle | 16 | 3.4.08.02.003 | Door Gasket | | | |

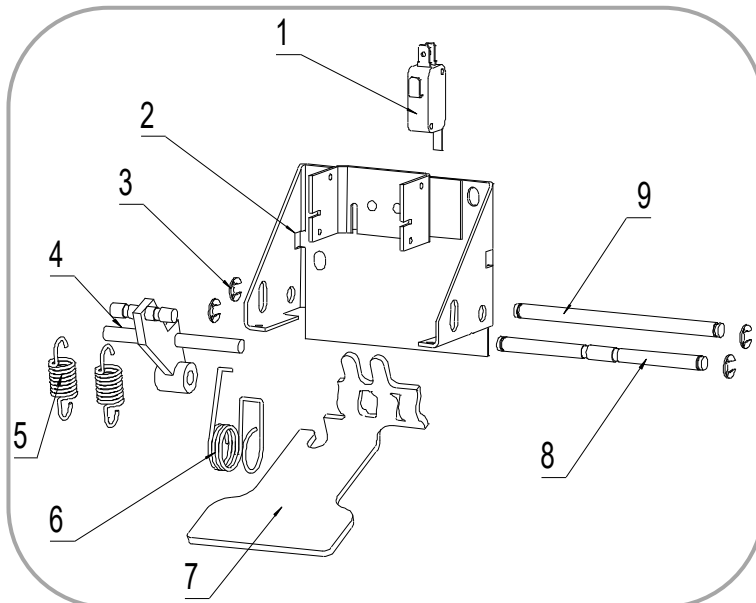


| Item | Part # | Description |
|------|---------------|---------------------|
| 1 | 3.1.03.01.004 | Switch - Draw |
| 2 | 2.1.1.19.0010 | Switch Mount |
| 3 | 3.6.34.002 | C-Clip - #6 |
| 4 | 2.1.1.19.0006 | Draw Switch Lever |
| 5 | 3.6.02.002 | Spring - Draw |
| 6 | 3.6.01.001 | Spring - Return - L |
| 7 | 2.1.4.05.009 | Draw Arm - L |
| 8 | 2.1.4.05.001 | Retention Pin - F |
| 11 | 2.1.4.05.002 | Retention Pin - R |

Hopper Agitator

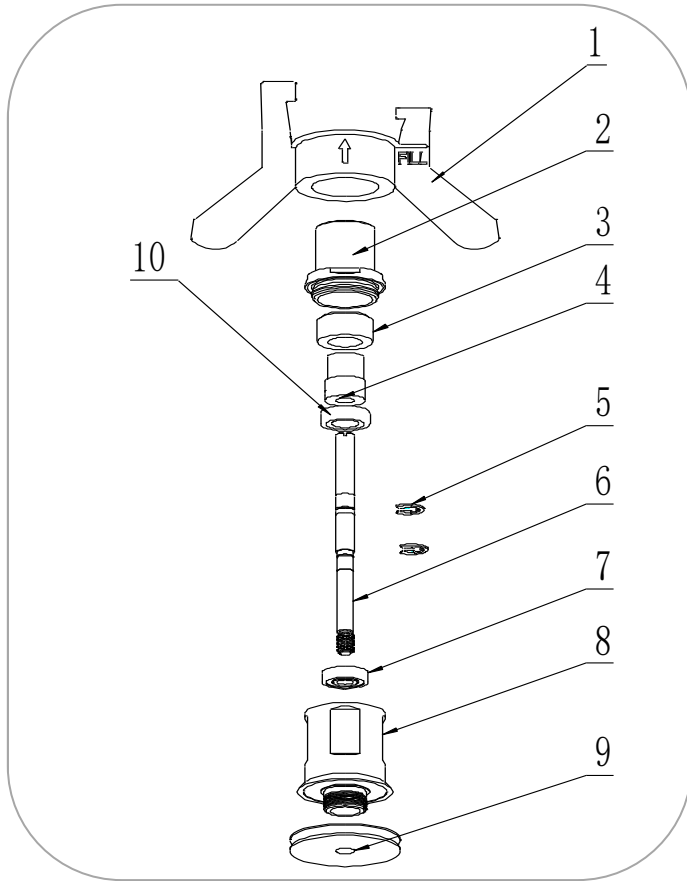


| Item | Part # | Description |
|------|---------------|--------------------|
| 1 | 2.1.1.23.0001 | Agitator Blade |
| 2 | 2.1.4.02.005 | HA Housing Cap |
| 3 | 2.1.4.02.002 | HA Main Magnet |
| 4 | 2.1.4.02.003 | HA Shaft Magnet |
| 5 | 3.6.34.003 | C-Clip |
| 6 | 2.1.3.42.0002 | Drive Shaft |
| 7 | 3.3.02.07.004 | HA Bearing - Lower |
| 8 | 2.1.4.02.001 | HA Housing |
| 9 | 2.1.4.02.015 | Pulley - HA |
| 10 | 3.3.02.07.003 | HA Bearing - Upper |

SPECS—INTERNAL PARTS

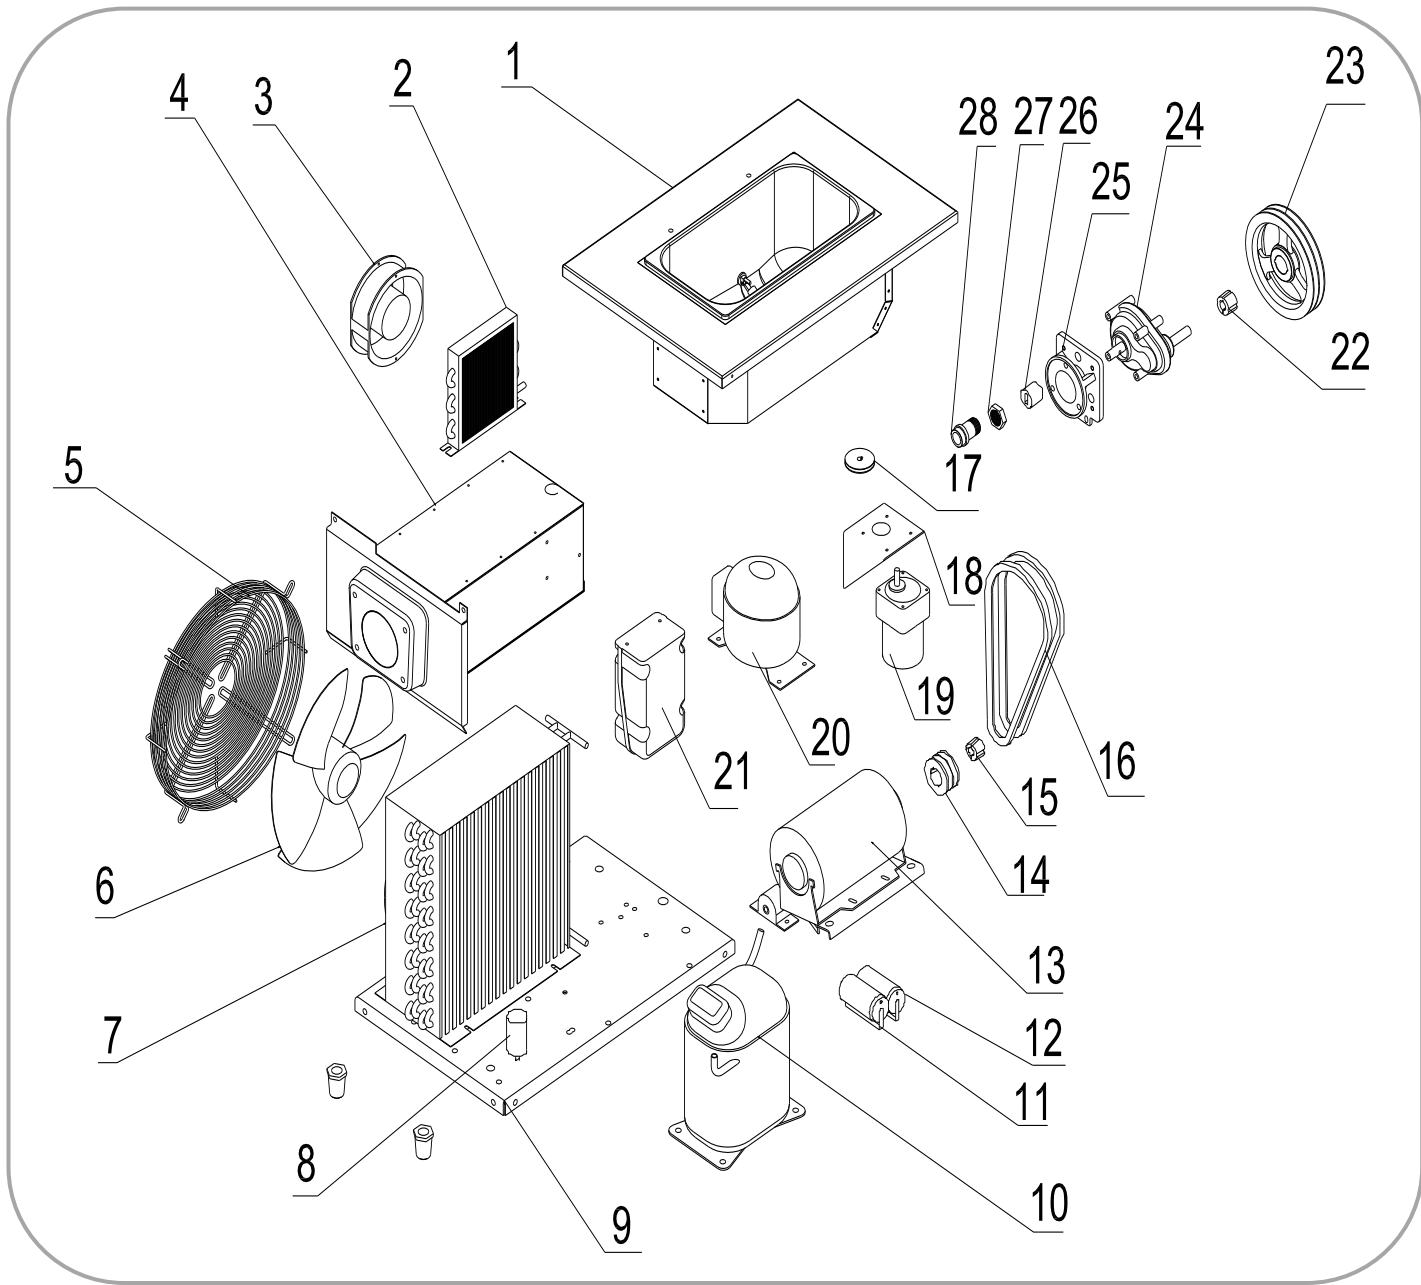


| Item | Part # | Description | Item | Part # | Description | Item | Part # | Description |
|------|-----------------|-------------------|------|---------------|---------------------|------|---------------|---------------------|
| 1 | 2.1.1.03.0045 | Hopper Assembly | 11 | 3.1.02.22.009 | Capacitor - Running | 21 | 3.2.01.04.004 | Start Component |
| 2 | 3.2.02.01.001 | Condenser - Aux | 12 | 3.1.02.22.061 | Capacitor - Start | 22 | 3.3.04.01.005 | Bushing - 1008 |
| 3 | 3.2.03.01.001 | Fan Motor - Aux | 13 | 3.3.01.05.003 | Motor - 900W | 23 | 3.3.04.02.007 | Pulley - 182x2-1008 |
| 4 | 2.1.1.06.0038 | Cylinder Assembly | 14 | 3.3.04.02.001 | Pulley - 63x2-1008 | 24 | 3.3.02.01.002 | Gear Box |
| 5 | 3.2.03.04.001-1 | Fan Cover | 15 | 3.3.04.01.005 | Bushing - 1008 | 25 | 2.1.3.15.0003 | Gear Box Mount |
| 6 | 3.2.03.04.001 | Fan Motor - Main | 16 | 3.3.03.01.005 | Belt - XPA1132 | 26 | 3.3.02.04.002 | Drive Coupling |
| 7 | 3.2.02.01.005 | Condenser - Main | 17 | 3.3.04.04.008 | Pulley - HA - 34mm | 27 | 3.3.02.02.010 | Nut - RS Bearing |
| 8 | 3.2.03.04.001-2 | Capacitor - Fan | 18 | 2.3.4.45.007 | Bracket - HA | 28 | 3.3.02.02.002 | Rear Shell Bearing |
| 9 | 2.2.4.01.0004 | Chassis | 19 | 3.3.01.01.001 | Agitator Motor | | | |
| 10 | 3.2.01.02.005 | Compressor - Main | 20 | 3.2.01.01.002 | Compressor - Aux | | | |

SPECS—AIR PUMP PARTS

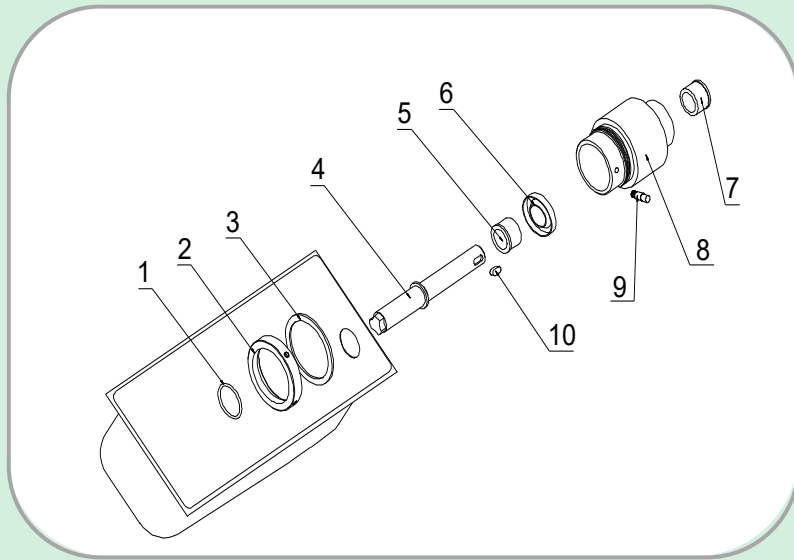


| Item | Part # | Description |
|------|---------------|--------------------|
| 1 | 3.4.08.03.010 | Nylon Ring - Shaft |
| 2 | 2.1.4.01.016 | Nut - Pump Seat |
| 3 | 3.4.08.03.012 | Nylon - Pump Seat |
| 4 | 2.1.4.01.018 | Drive Shaft - Pump |
| 5 | 3.3.02.06.001 | Bearing - Front |
| 6 | 3.3.02.09.002 | Bearing Gasket |
| 7 | 3.3.02.06.001 | Bearing - Rear |
| 8 | 2.1.4.01.017 | Air Pump Seat |
| 9 | 3.6.39.010 | Lock Pin |
| 10 | 3.6.33.002 | Drive Shaft Key |

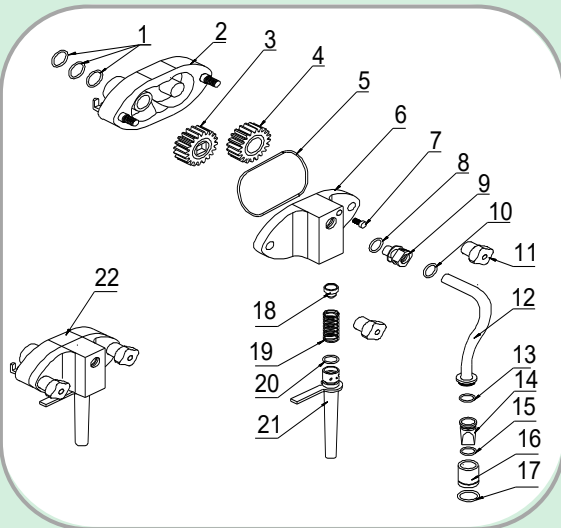

| Item | Part # | Description |
|------|---------------|--------------------|
| 1 | 3.4.08.01.025 | O-Ring |
| 2 | 2.1.4.01.004 | Air Pump Shell |
| 3 | 2.1.4.01.013 | Driving Gear |
| 4 | 2.1.4.01.012 | Driven Gear |
| 5 | 3.4.08.01.004 | Air Pump Gasket |
| 6 | 2.1.4.01.003 | Air Pump Cover |
| 7 | 2.1.4.01.029 | Lock Nut |
| 8 | 3.4.08.01.003 | O-Ring - Connector |
| 9 | 2.1.4.01.023 | Connector—Pump |
| 10 | 3.4.08.01.008 | O-Ring - Connector |
| 11 | 2.1.4.01.002 | Hand Screws |


| Item | Part # | Description |
|------|---------------|--------------------|
| 12 | 2.1.4.01.041 | Air Tube - Left |
| 13 | 3.4.08.01.003 | O-Ring - Tube |
| 14 | 2.1.4.01.035 | Check Valve |
| 15 | 3.4.08.01.023 | O-Ring - Valve |
| 16 | 2.1.4.01.039 | Connector - Hopper |
| 17 | 3.4.08.01.037 | O-Ring - Connector |
| 18 | 3.4.07.06.003 | Plug |
| 19 | 3.6.03.003 | Spring |
| 20 | 3.4.08.01.003 | O-Ring - Suction |
| 21 | 2.1.4.01.048 | Suction Tube - 180 |
| 22 | 2.1.1.13.0001 | AP Assembly |

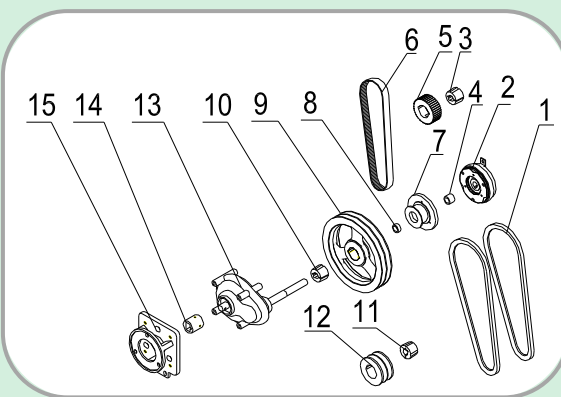

| Item | Part # | Description |
|------|---------------|--------------------|
| 1 | 3.3.03.01.016 | Belt - XPA1180 |
| 2 | 3.1.01.06.001 | Micro Clutch |
| 3 | 3.3.04.01.005 | Bushing - 1008 |
| 4 | 3.3.04.06.001 | Bushing - Clutch |
| 5 | 3.3.04.03.001 | Pulley - 63-5-1008 |
| 6 | 3.3.03.02.013 | Belt - 5M740 |
| 7 | 3.3.04.03.002 | Pulley - 50-5M |
| 8 | 3.3.04.06.002 | Bushing - Clutch |

| Item | Part # | Description |
|------|---------------|---------------------|
| 9 | 3.3.04.02.008 | Pulley - 212x2-1210 |
| 10 | 3.3.04.01.007 | Bushing - 1210 |
| 11 | 3.3.04.01.005 | Bushing-1008 |
| 12 | 3.3.04.02.001 | Pulley - 63x2-1008 |
| 13 | 3.3.02.01.007 | Gear Box - Long |
| 14 | 3.3.02.04.002 | Drive Coupling |
| 15 | 2.1.3.15.0003 | Gear Box Mount |

SPECS—WIRING

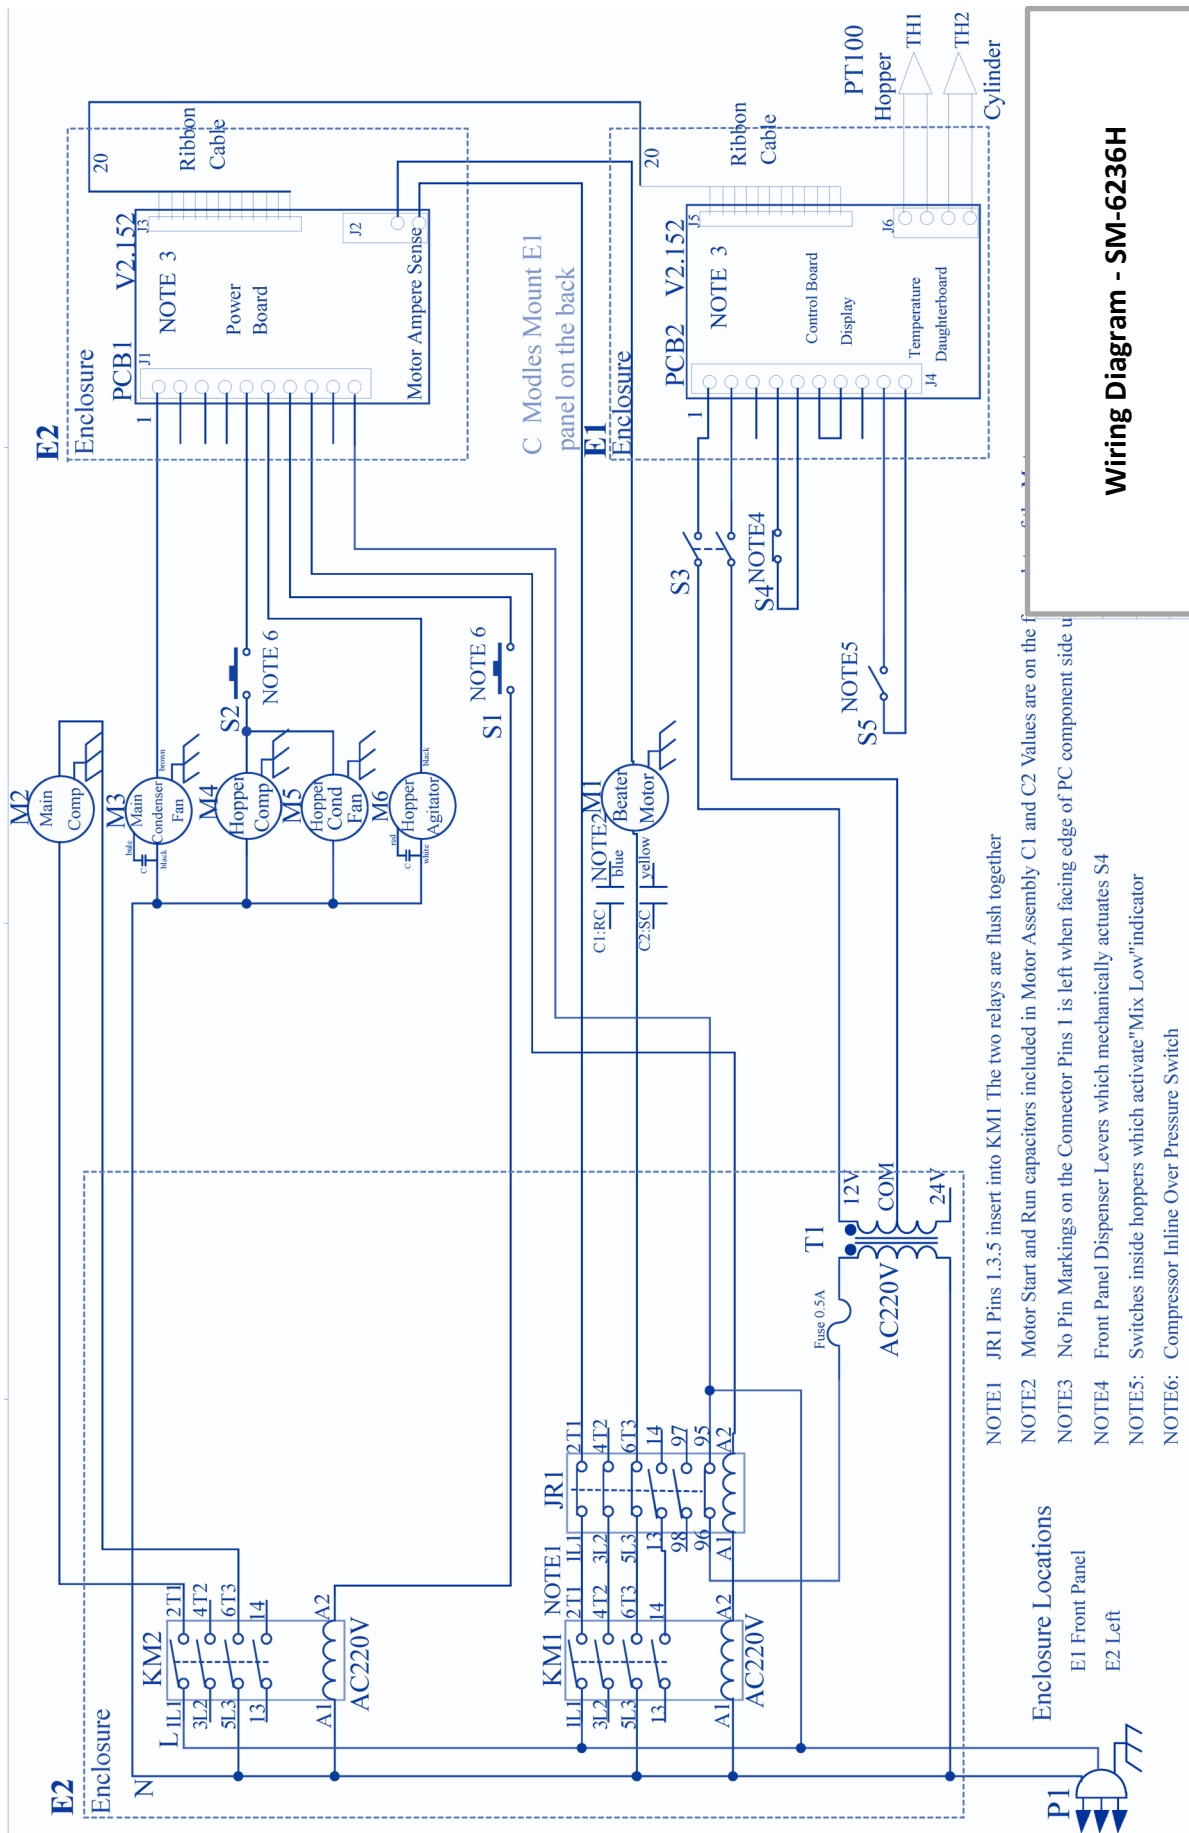

NOTE1 JRI Pins 1,3,5 insert into KMI The two relays are flush together
 NOTE2 Motor Start and Run capacitors included in Motor Assembly C1 and C2 Values are on the
 NOTE3 No Pin Markings on the Connector Pins 1 is left when facing edge of PC component side u
 NOTE4 Front Panel Dispenser Levers which mechanically actuates S4
 NOTE5 Switches inside hoppers which activate "Mix Low" indicator
 NOTE6 Compressor Inline Over Pressure Switch

Enclosure Locations
 E1 Front Panel
 E2 Left

| Item | Part # | Description | Item | Part # | Description | Item | Part # | Description |
|------|---------------|-------------------|------|---------------|----------------|------|---------------|-----------------|
| M1 | 3.3.01.05.003 | Motor - 900W | M6 | 3.3.01.01.001 | Agitator Motor | PC1 | 2.2.1.01.0007 | Power Board |
| M2 | 3.2.01.02.005 | Compressor - Main | JR | 3.1.01.02.011 | Thermal Relay | PC2 | 2.2.1.01.0004 | Control Board |
| M3 | 3.2.03.04.001 | Fan Motor - Main | KM | 3.1.01.01.010 | Contactors | S1/2 | 3.2.04.06.004 | Pressure Switch |
| M4 | 3.2.01.01.002 | Compressor - Aux | T | 3.1.01.04.007 | Transformer | S3 | 3.1.03.03.003 | Power Switch |
| M5 | 3.2.03.01.001 | Fan Motor - Aux | TH | 3.1.02.13.020 | Thermostat | S4 | 3.1.03.01.004 | Draw Switch |
| | | | | | | S5 | 3.1.03.04.009 | Low Mix Sensor |
| | | | | | | F | 3.1.02.08.002 | Fuse - 0.5A |

